

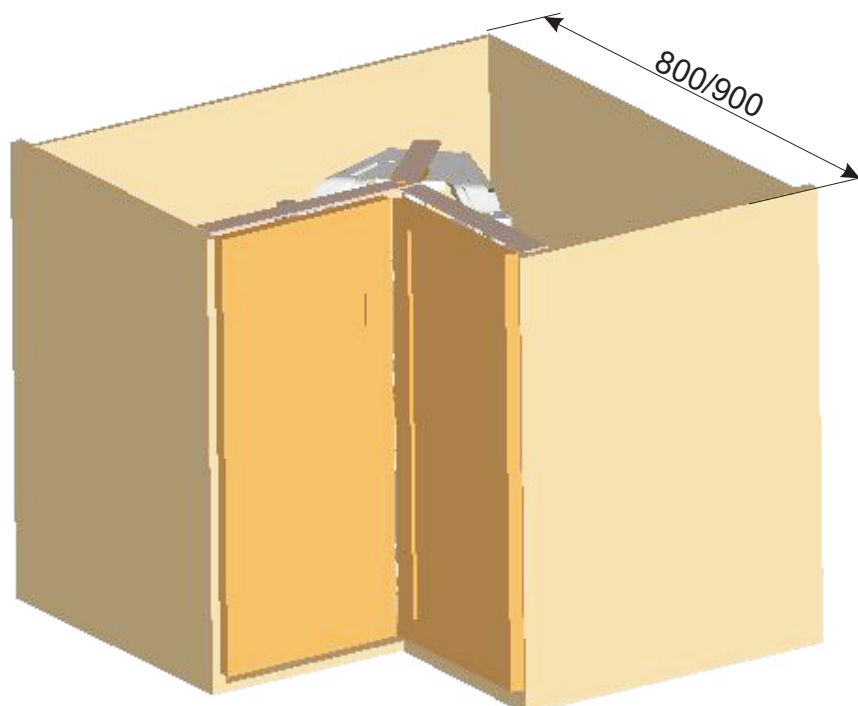


Montageanleitung für den Eckschrankschrankdrehbeschlag REVO 90°

Mounting instruction for
Corner Carousel Fitting
Instructions de montage
pour meubles bas d'angle



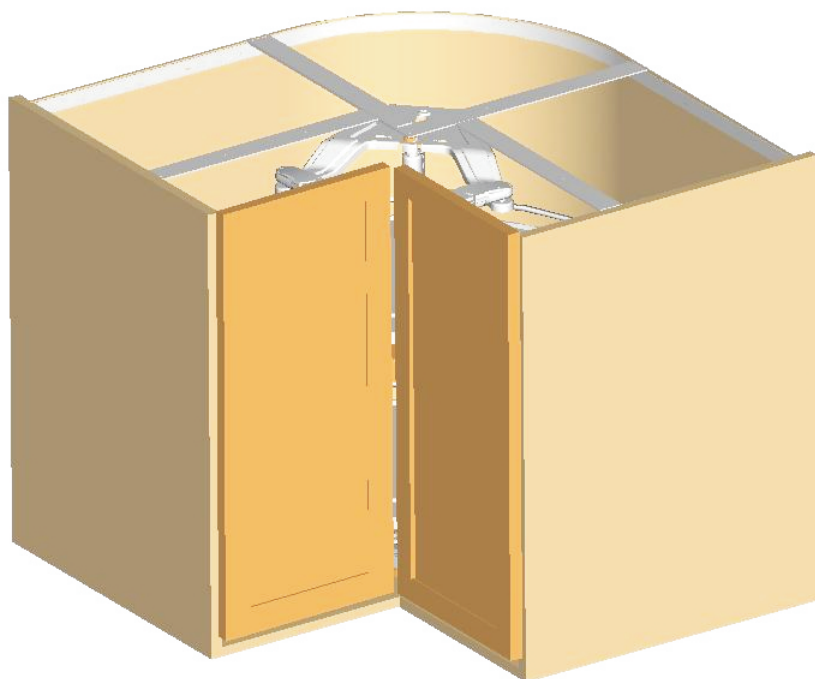


1. 900mm

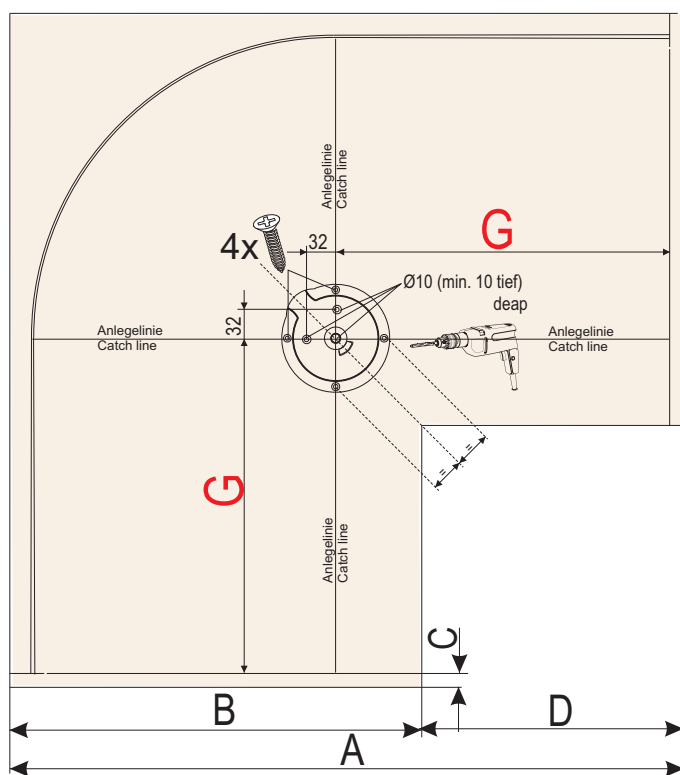


$$G = A - B - C - \text{Aufschlagpufferdicke} + 92,5\text{mm}$$

(door buffer)

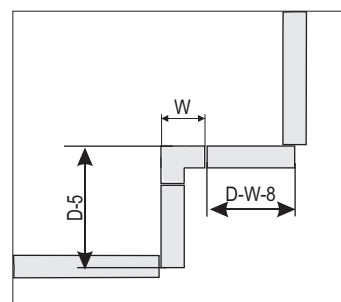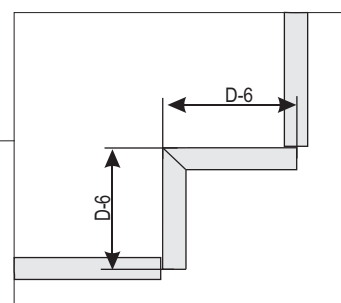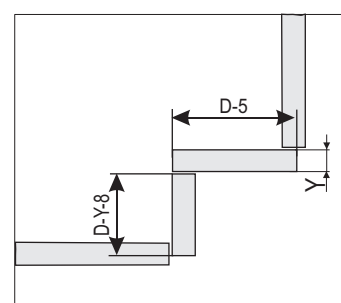







800mm

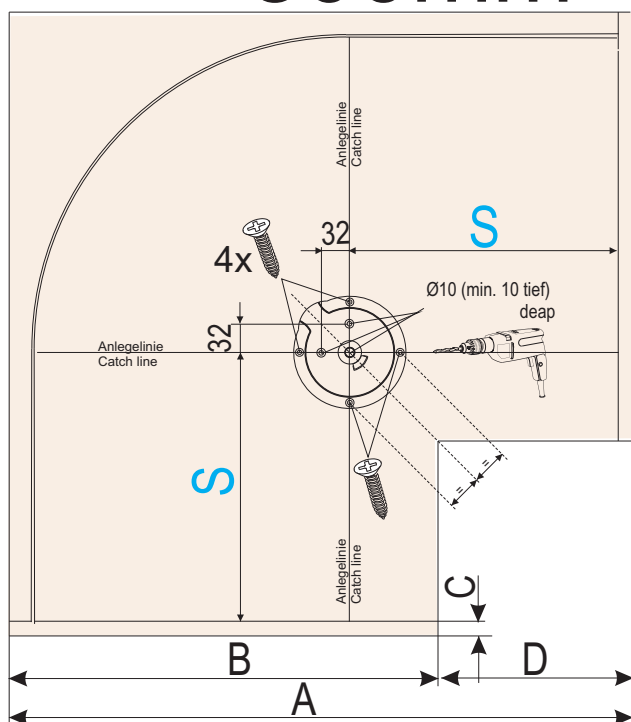







$$S = A - B - C - \text{Aufschlagpufferdicke} + 142,5\text{mm}$$

(door buffer)


2.

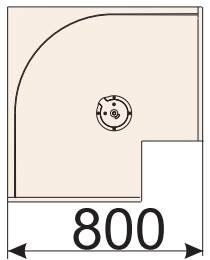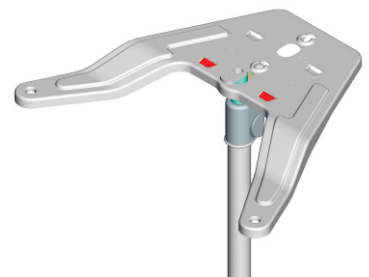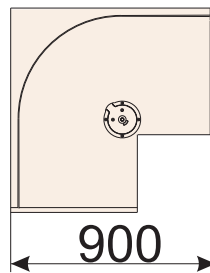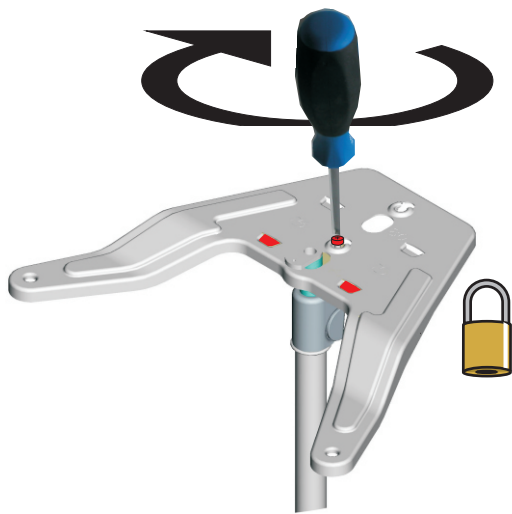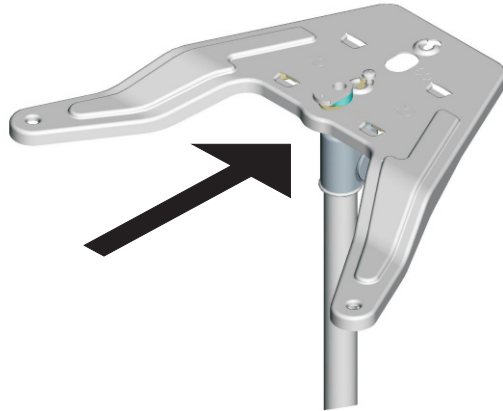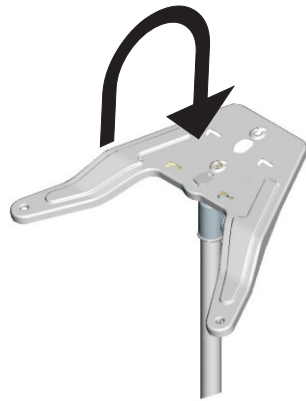



3.

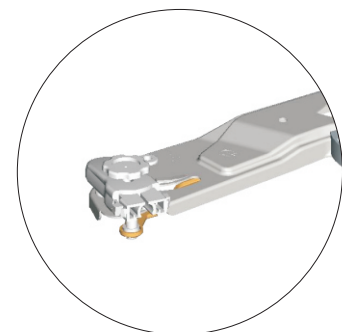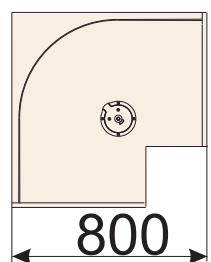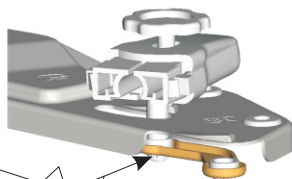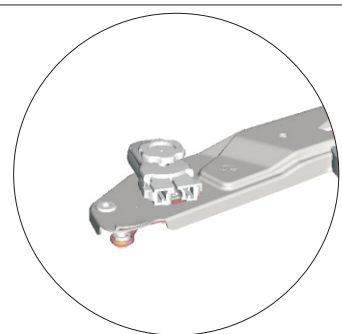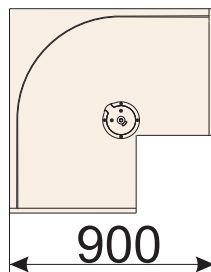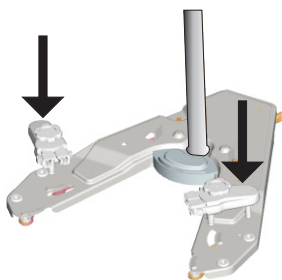






4.

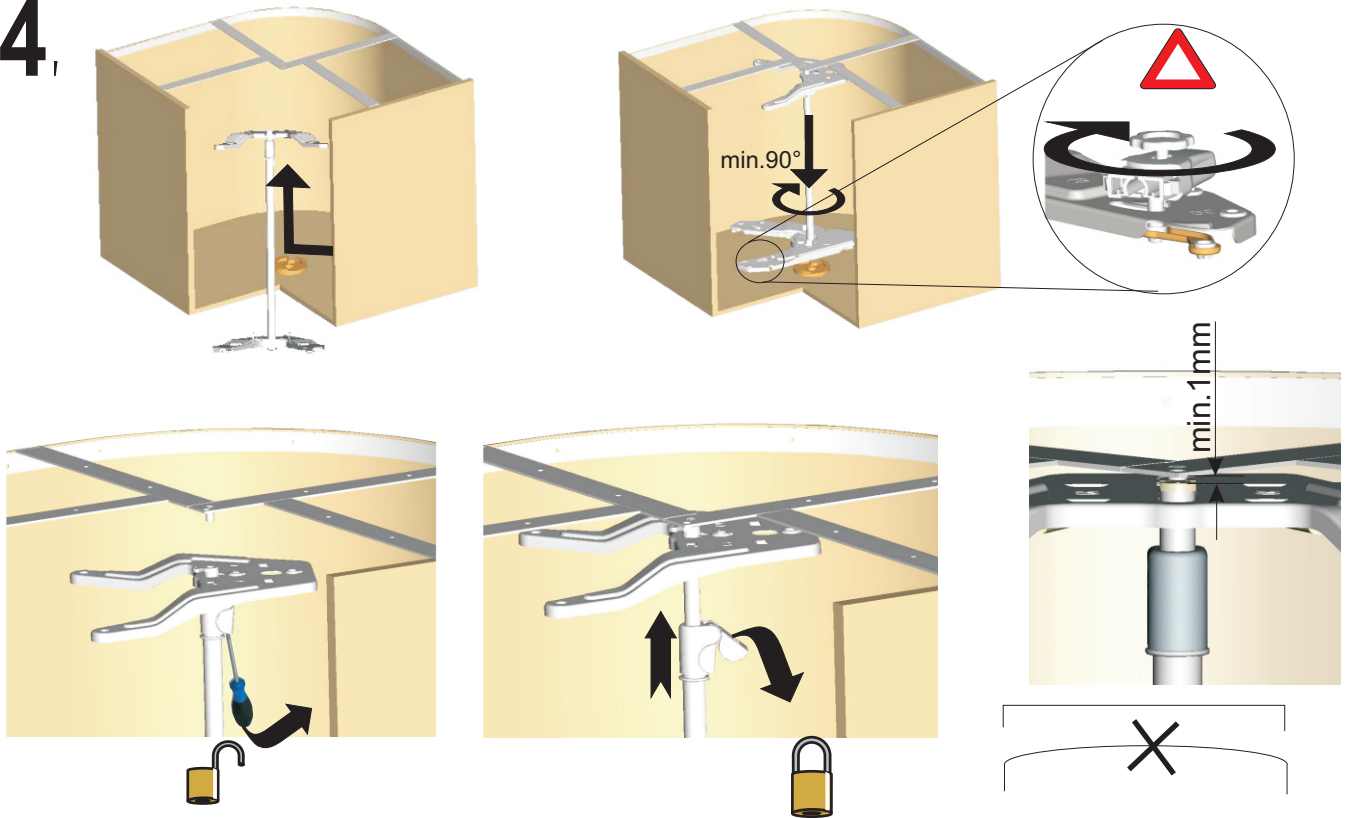

5.

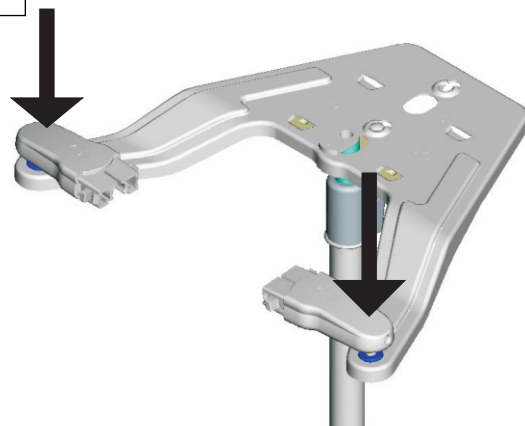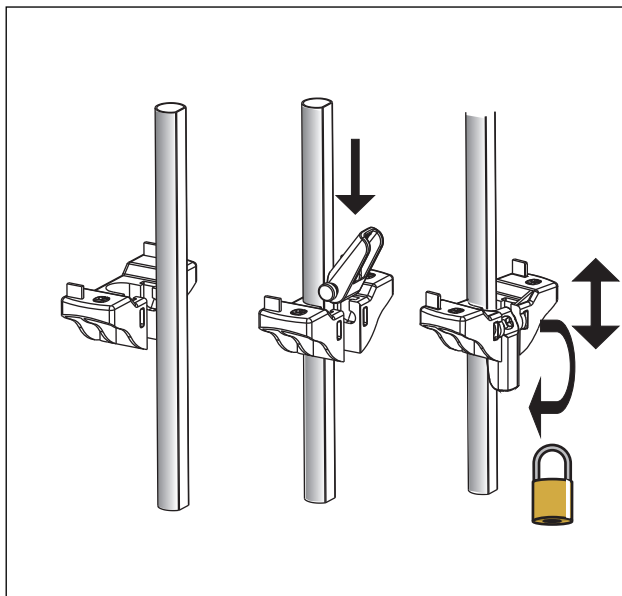


6.

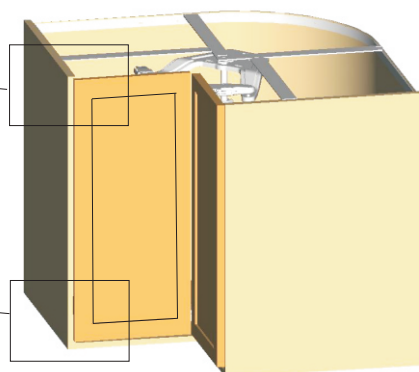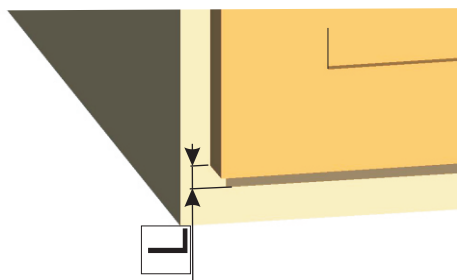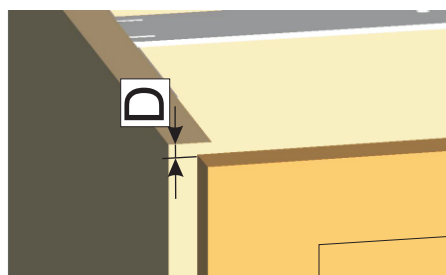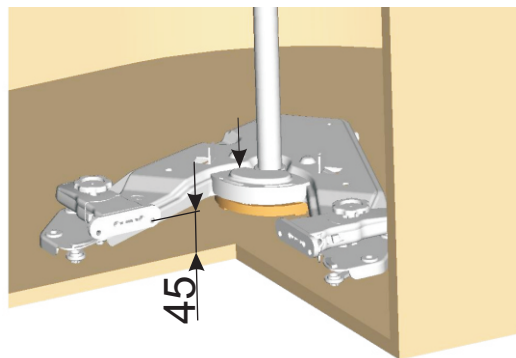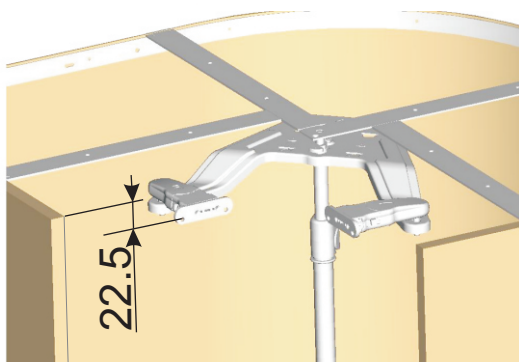

900mm

Euro-Schraube
verwenden
use euro screw

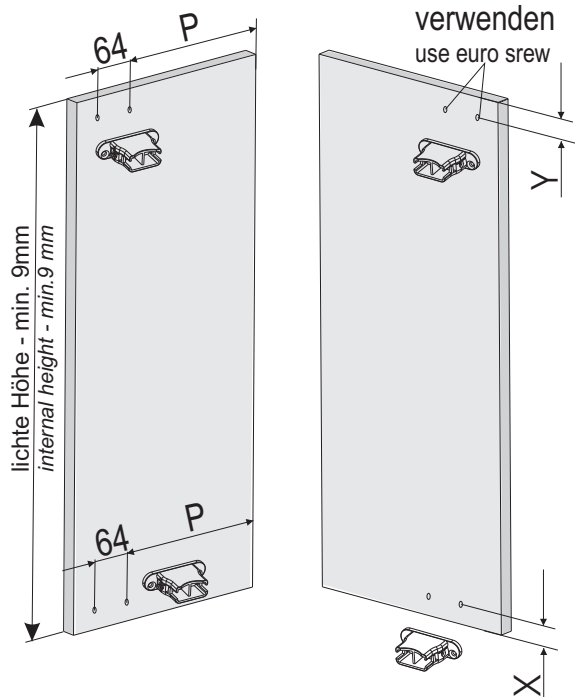

P=**G**-255+Türaufschlag
door overlap


X=45-L L= min 7mm

Y=22,5-D D= min 2mm



800mm

Euro-Schraube
verwenden
use euro screw

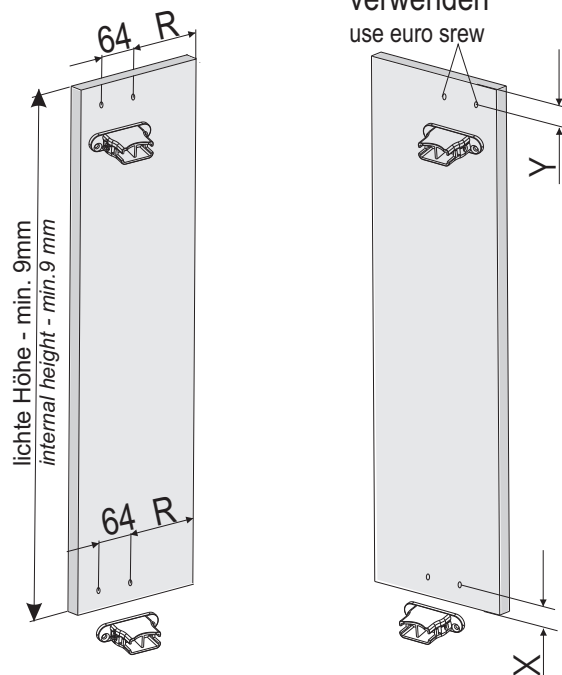

R=**S**-305+Türaufschlag
door overlap







X=45-L L= min 7mm

Y=22,5-D D= min 2mm




Justieranleitung REVO 90°

Adjustment instructions
Instruction d'ajustage

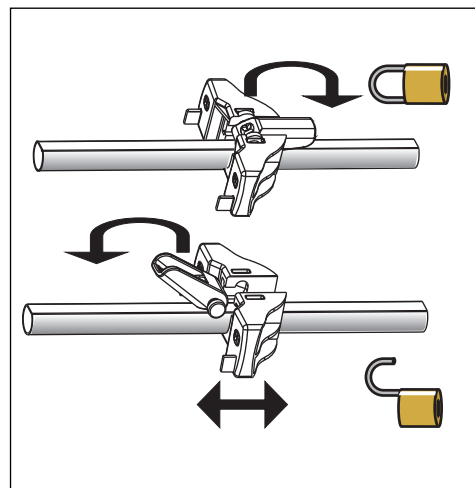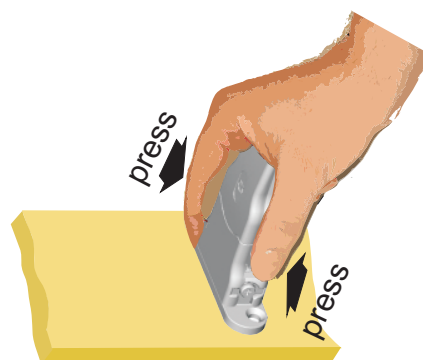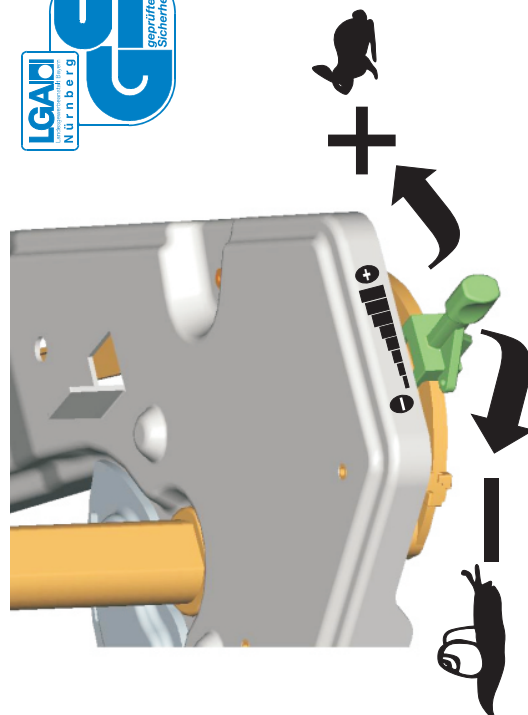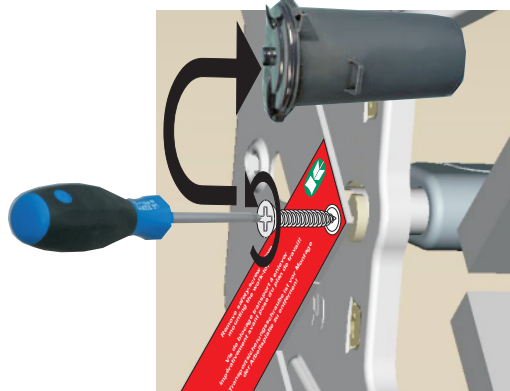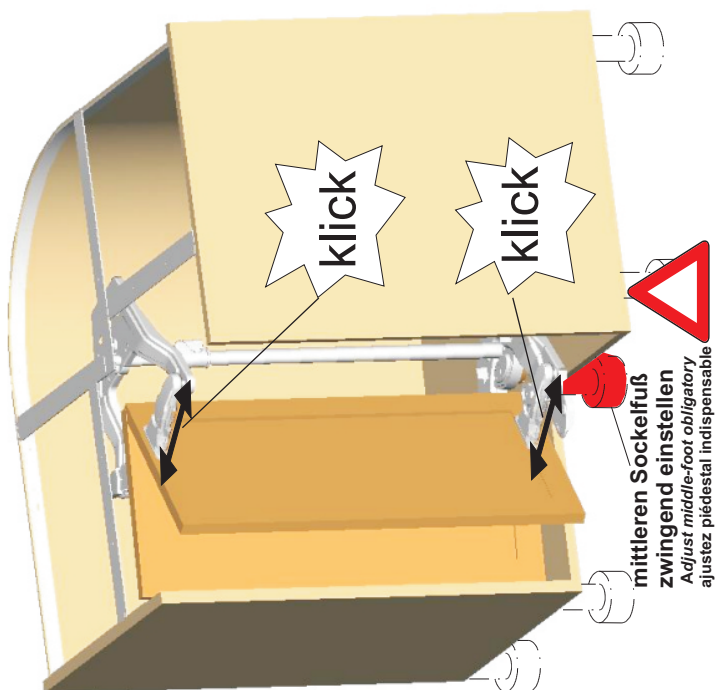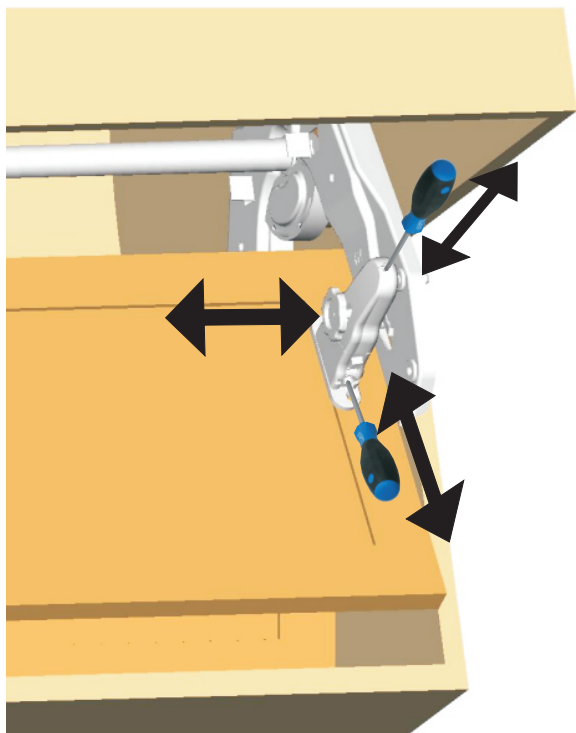


900mm

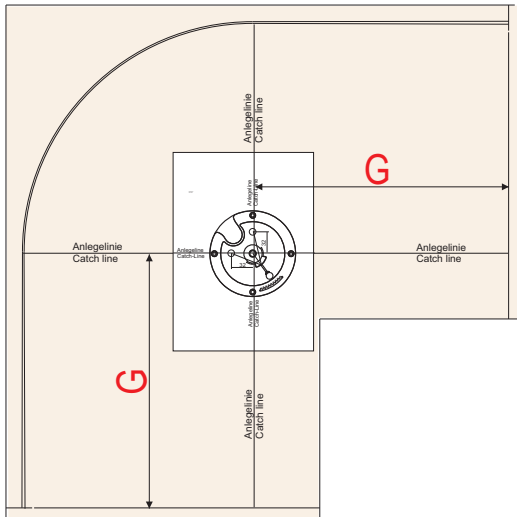


Anlegeline
Catch-Line

Anlegeline
Catch-Line

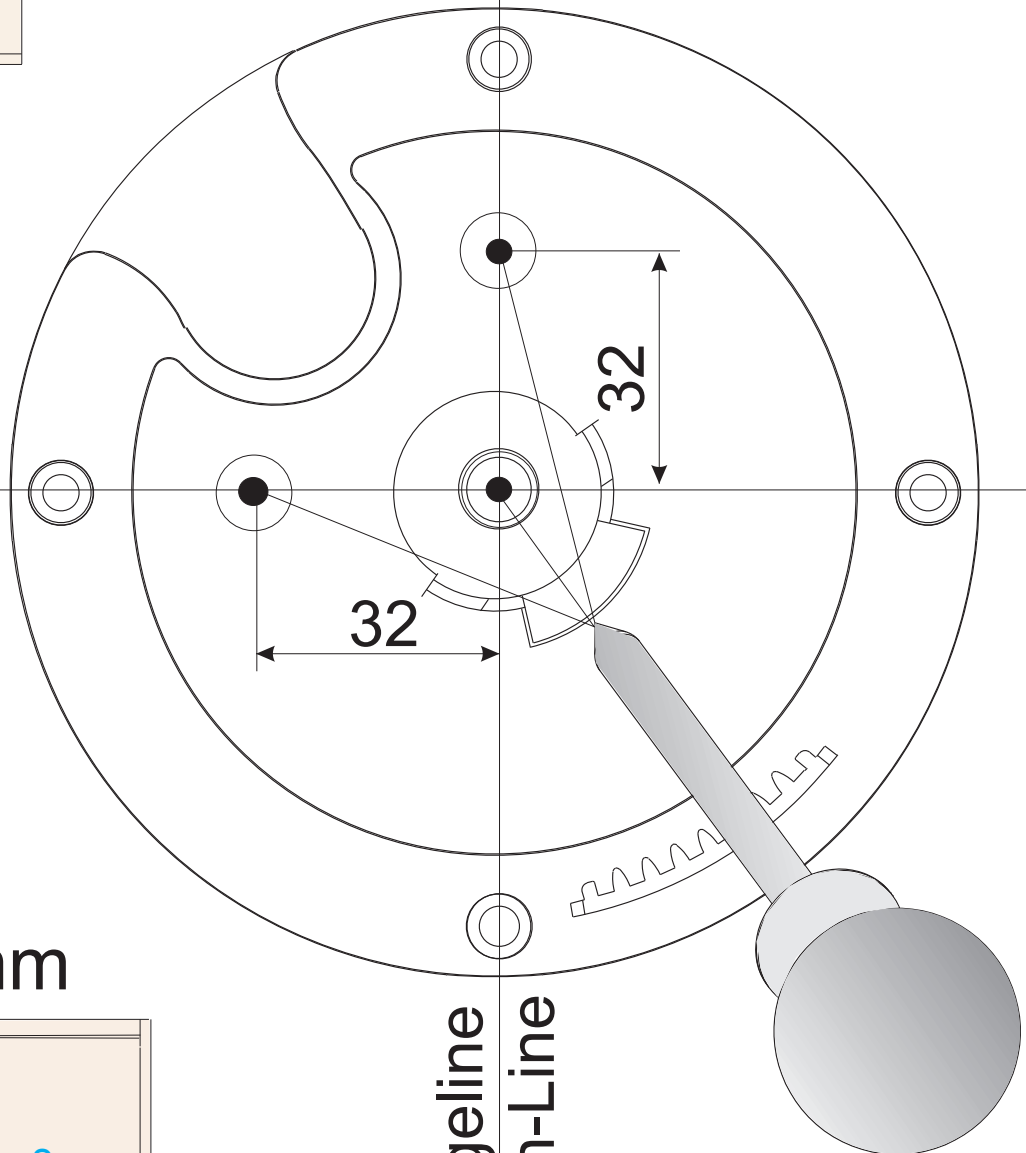

800mm

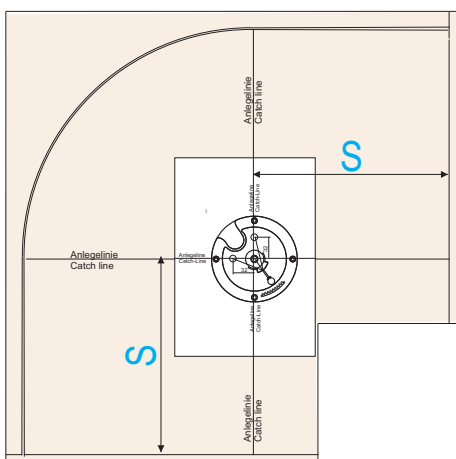

Anlegeline
Catch-Line